



1

Unpack box and make sure you have all items shown here.

Extend Unit

2

Remove screws and open unit cover for wiring and setup.

3

Connect to power.

Feed wires through cable gland, and connect as shown.

Suitable 12-VDC Power Supply (not included)

Ascent Link Unit

⚠ CAUTION ⚠

When connecting a power supply, remember to connect positive to positive and negative to negative to avoid damage.

Reversing polarity can damage the unit and void the warranty!

We recommend using 18-gauge stranded wire for all connections.

4

Match DIP switches on keypad unit with DIP switches on primary unit to get units ready for pairing. (Default is 1 off, 2 on, 3 on, 4 off.)

5

Confirm primary and Ascent Link units have power, and then scan QR code below for completing pairing process.

**INSTALLATION COMPLETE!**

If paired, your Ascent Link unit is ready to use.

What's what?

All important components labeled

Unit shown with cover removed. Internal wiring not shown for clarity.

**Reset Button**  
For reset procedures. Scan QR code on next page for instructions.

**DIP Switches**  
For pairing with primary unit. Scan QR code for more.

**Power Terminals**  
For wiring to power. See Step 3.

**Power Indicator LED**

**Network Status LED**  
Status indicated by color:  
Blue - connected to primary unit  
Magenta (solid) - connected to Link unit but not primary unit  
Magenta (flash) - no connection (isolated)

**Ascent Link Extend (37-LE1)**

⚠ CAUTION ⚠

Tighten the cable gland, and seal any openings created in the enclosure.

Failure to follow these instructions can damage the unit!

Need More?

Use the QR code below to get access to more resources, including how-to videos and additional wiring diagrams for connecting accessory devices, as well as information on pairing.



## NEED HELP

Call (972) 474-6422  
Email [support@summitcontrol.com](mailto:support@summitcontrol.com)  
We are available **Mon-Fri / 8am-5pm Central**