



IMPORTANT



This Ascent unit **WILL NOT WORK** until the activation process is **COMPLETE!**

See the included **Activation Guide** to get this unit activated.

If you need help or have any questions, please contact Summit Control at (972) 474-6422.



WARNING



AUTOMATIC GATES CAN CAUSE SERIOUS INJURY OR DEATH!

ALWAYS CHECK THAT THE GATE PATH IS **CLEAR BEFORE OPERATING!**

REVERSING OR OTHER SAFETY DEVICES SHOULD ALWAYS BE USED!





IMPORTANT

We recommend mounting the unit on a

gooseneck pedestal using the included

mounting hardware.

4G LTE Antenna Extension Kit

Failure to do so may result in NO SIGNAL!




Use all four carriage bolts when mounting

CAUTION

the unit to a pedestal. Leave the "hockey puck" antenna in place even if using an antenna extension.

Seal all openings created in the enclosure.

Failure to follow these instructions can damage the unit!

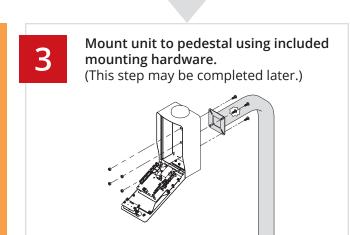

If using alternate mounting, the


(Model 16-ANTX-1) should be purchased and installed.



Unit shown with faceplate fully open. Internal wiring not shown for clarity.

(O)

0

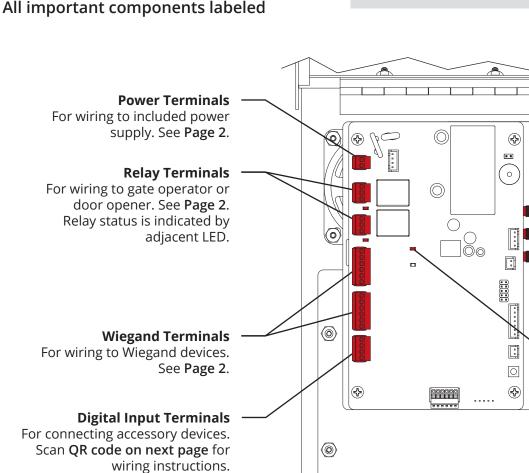

STOP



This is a cellular accessory for a gate or door. An uninterrupted cellular connection CANNOT BE GUARANTEED!

An emergency egress or primary entry mechanism SHOULD ALWAYS BE USED! (transmitter, fire box, mechanical release)

Consult with your dealer, distributor, and/or system designer for more information.

Cellular Antenna Jacks

Jack marked with dashed line is backup jack and is not used.

WiFi/Bluetooth Antenna Jack

Power Indicator LED

Directory Insert

Fill out included insert by hand to get started right away, or scan QR code on next page for printable templates.



Call **(972) 474-6422** Email support@summitcontrol.com We are available Mon-Fri / 8am-5pm Central

0

 \odot



Model **16-X2**

Connect wires

Feed wires through back of unit, and connect as shown using included screwdriver.

Consult gate/door opener manual for exact connections.

Terminals vary widely across manufacturers and models.

Additional wiring diagrams can be found below and online.




CAUTION



When connecting the power supply, remember to connect positive to positive and negative to negative to avoid damage.

Reversing polarity can damage the unit and void the warranty!

We recommend using 18-gauge stranded wire for all connections.

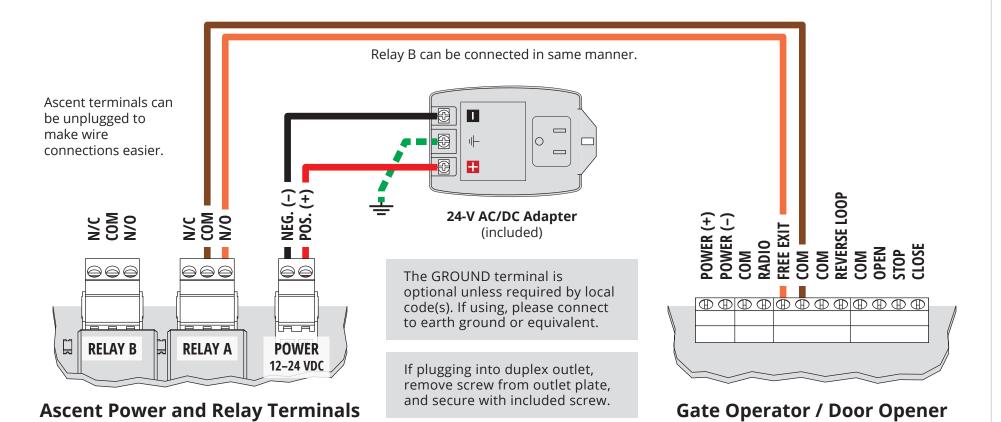



STOP

Before going forward, double check all wiring and make sure the unit has power! A wiring diagram for connecting to Wiegand devices can be found below. For connecting accessories not mentioned,

please scan the QR code on this page. Make sure the gate path is clear before

completing Step 5!

Key in temporary code 2012 on keypad and confirm gate opens. If it does, close and lock unit faceplate.

Adding codes is done in online dashboard and **CANNOT** be done using keypad on unit!



INSTALLATION COMPLETE!

Now follow the **Activation Guide** to create an account and begin using Ascent.

Wiegand Device

Feed wires through back of unit, and connect as shown using included screwdriver.

These terminals are used to connect a Wiegand device such as a card reader or Wiegand keypad.


Either set of Wiegand terminals can be used for wiring and then configured in the online dashboard.

CAUTION



Disconnect power to the Ascent unit before connecting Wiegand devices.

Failure to disconnect power can

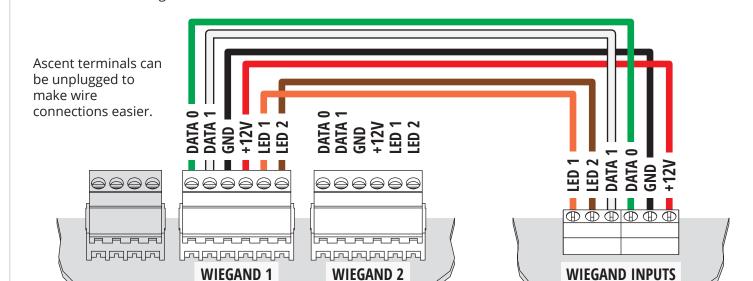

Ascent Wiegand Terminals

Wiegand Device

Need More?

Use the QR code below for printable directory insert templates and more resources, including how-to videos and additional wiring diagrams for connecting accessory devices.



